

# NUMERICAL LIST

Leland No.	Description	Page No.	Leland No.	Description	Page No.	Leland No.	Description	Page No.	Leland No.	Description	Page No.
A450	Compressor Drive Coupling	424	K128A	Brake Repair Kit 46, 58, 88, 120, ... 125, 136, 149, 182, 187, 203, ...	211	K298	Brake Repair Kit	17			239
A610	Air Compressor Hub	424				K299	Brake Repair Kit	19	K345	Cam Bushing Kit 31, 53, 129, 229	
A866	Air Compressor Hub	424	K128K	Brake Repair Kit 43, 58, 87, 119, ... 124, 135, 148, 181, 186, 202, ...	210	K300	Brake Repair Kit	19	K346	Cam Bushing Kit ... 47, 236, 239	
A912	Air Compressor Hub	424				K301	Cam Bushing Kit	17	K347	Cam Bushing Kit 32, 53, 130, 229	
A944	Compressor Drive Coupling	424	K130	Brake Repair Kit	241	K302	Cam Bushing Kit	19	K348	Cam Bushing Kit 48, 60, 137, 236, ...	239
A945	Air Compressor Hub	424	K131	Cam Bushing Kit	241	K303	Brake Repair Kit 42, 57, 118, 133, ...	180, 201			
A946	Air Compressor Hub	424	K132	Brake Repair Kit	243	K303K	Brake Repair Kit ... 42, 118, 134, ...	180, 201	K351	Cam Bushing Kit . 139, 141, 144, ... 146, 150, 153, 166, 183, 189, ...	195, 223
K8	Brake Lining Rivet	314	K133	Cam Bushing Kit	243	K304	Brake Repair Kit 45, 58, 88, 120, ... 126, 136, 149, 182, 188, 203, ...	211	K352	Brake Repair Kit 29, 52, 129, 228	
K26	Brake Repair Kit	257, 420	K134	Brake Repair Kit	241				K353	Brake Repair Kit	53
K30	Brake Repair Kit	247, 421	K135	Brake Repair Kit	113	K304K	Brake Repair Kit 45, 58, 89, 120, ... 126, 136, 149, 182, 188, 203, ...	211	K354	Brake Repair Kit	85, 113
K31	Brake Repair Kit	249	K136	Brake Repair Kit	83, 115				K355	Cam Bushing Kit	32
K31Z	Brake Repair Kit	249	K137	Brake Repair Kit	27, 228	K305	Brake Repair Kit	44	K356	Brake Repair Kit	66
K32	Brake Repair Kit	247	K138	Cam Bushing Kit	100	K306	Brake Repair Kit 42, 57, 118, 133, ...	179, 200	K357	Cam Bushing Kit . 66, 68, 73, 77	
K42	Brake Repair Kit	72, 92	K139	Cam Bushing Kit	100	K307	Brake Repair Kit	81	K358	Brake Repair Kit	68, 70
K43	Brake Repair Kit	122	K140	Cam Bushing Kit . 66, 68, 73, 77		K308	Brake Repair Kit	245	K360	Cam Bushing Kit ..... 70, 93, 97	
K44	Brake Repair Kit . 193, 218, 234		K141	Cam Bushing Kit ..... 70, 93, 97		K309	Brake Repair Kit	84, 116	K361	Cam Bushing Kit	127
K44A	Brake Repair Kit . 192, 217, 233		K144	Cam Bushing Kit ..... 31, 229		K309K	Brake Repair Kit	84, 116	K362	Brake Repair Kit	176
K44B	Brake Repair Kit . 193, 218, 234		K145	Cam Bushing Kit 31, 53, 129, 229		K310	Cam Bushing Kit . 146, 150, 153		K363	Cam Bushing Kit . 159, 172, 205, ...	212
K45	Brake Repair Kit . 194, 219, 234		K146	Cam Bushing Kit ... 47, 236, 239		K311	Brake Repair Kit	245	K364	Brake Repair Kit	79
K46	Brake Repair Kit	152	K147	Cam Bushing Kit	62	K312	Cam Bushing Kit . 66, 68, 73, 77, ...	79, 81, 102	K365	Cam Bushing Kit . 139, 141, 144, ... 146, 150, 153, 166, 183, 189, ...	195, 223
K48	Cam Bushing Kit . 139, 141, 144, ... 150, 153, 166, 183, 189, 195, ...	223	K148	Cam Bushing Kit	220	K313	Cam Bushing Kit . 159, 159, 172, ...	205	K366	Brake Repair Kit	179
			K149	Cam Bushing Kit	220	K314	Cam Bushing Kit 47, 60, 137, 239		K368	Cam Bushing Kit	220
K50	Brake Repair Kit	26, 228	K150	Cam Bushing Kit	221	K315	Brake Repair Kit	114	K369	Brake Repair Kit	53
K51	Cam Bushing Kit	221	K151	Cam Bushing Kit	47	K316	Brake Repair Kit	73	K370	Brake Repair Kit 45, 85, 89, 136, ... 150, 183, 188, 203, 211	
K52	Cam Bushing Kit	122	K152	Cam Bushing Kit	221	K318	Brake Repair Kit	165, 172	K372	Brake Repair Kit	83, 115
K53	Cam Bushing Kit	157, 204	K154	Brake Repair Kit	157	K318K	Brake Repair Kit	165, 172	K373	Brake Repair Kit	30
K54	Brake Repair Kit	41	K235	Brake Repair Kit	250	K319	Cam Bushing Kit . 158, 173, 205		K374	Brake Repair Kit	35
K58	Brake Repair Kit	122	K236	Brake Repair Kit	247	K320	Brake Repair Kit . 45, 59, 85, 89, ... 120, 126, 137, 149, 183, 188, ...	203, 211	K375	Brake Repair Kit	75, 97
K59	Brake Repair Kit . 192, 217, 233		K259	Brake Repair Kit	168, 170	K322	Brake Repair Kit	87	K376	Brake Repair Kit	75
K60	Brake Repair Kit . 192, 217, 233		K260	Brake Repair Kit	168, 170	K323	Brake Repair Kit	253, 255	K377	Brake Repair Kit	30
K62	Brake Repair Kit	27, 227	K263	Brake Repair Kit	64	K324	Brake Repair Kit	253, 255	K379	Brake Repair Kit	15
K64	Brake Repair Kit	250	K264	Cam Bushing Kit	35, 64	K325	Brake Repair Kit	253, 255	K380	Brake Repair Kit ... 42, 134, 201	
K69	Brake Repair Kit 27, 52, 129, 227		K265	Brake Repair Kit	168, 170	K326	Brake Repair Kit	121	K480	Brake Repair Kit	84, 116
K70	Brake Repair Kit 41, 56, 117, 132, ... 178, 200		K268	Cam Bushing Kit	220	K327	Cam Bushing Kit 48, 60, 137, 236, ...	239	K481	Cam Bushing Kit	127
K70A	Brake Repair Kit 41, 56, 117, 133, ... 180, 201		K269	Cam Bushing Kit	158, 204	K328	Brake Repair Kit	114	K482	Cam Bushing Kit	32, 48
			K270	Cam Bushing Kit	158, 204	K329	Brake Repair Kit 43, 59, 87, 119, ... 125, 135, 148, 181, 187, 202, ...	210	K483	Cam Bushing Kit	32, 48
K74	Cam Bushing Kit	157, 204	K272	Cam Bushing Kit	170, 176				K489	Cam Bushing Kit . 159, 173, 206, ...	212
K77	Brake Repair Kit	152	K273	Cam Bushing Kit	168	K330	Brake Repair Kit	83, 115	K490	Cam Bushing Kit . 159, 174, 206, ...	212
K81	Cam Bushing Kit . 139, 141, 144, ... 150, 153, 166, 183, 189, 195, ...	223	K274	Brake Repair Kit	223	K331	Brake Repair Kit	85, 113	K491	Cam Bushing Kit . 160, 174, 206, ...	213
			K275	Brake Repair Kit	102	K332	Brake Repair Kit 44, 60, 88, 119, ... 125, 135, 148, 181, 187, 202, ...	210			
K88	Cam Bushing Kit	104, 122	K277	Brake Repair Kit	27				K493	Cam Bushing Kit	35, 64
K97	Cam Bushing Kit	157, 204	K279	Brake Repair Kit	28	K333	Cam Bushing Kit	220	K494	Cam Bushing Kit	32, 48
K103	Brake Repair Kit	100	K280	Brake Repair Kit	113	K334	Brake Repair Kit . 141, 143, 186		K495	Brake Repair Kit	97
K105	Brake Repair Kit	104	K280A	Brake Repair Kit	114	K334K	Brake Repair Kit	143, 186	K499	Cam Bushing Kit	66
K106	Brake Repair Kit	62	K281	Brake Repair Kit	223	K335	Brake Repair Kit	28	K500	Brake Repair Kit	46
K108	Cam Bushing Kit	104, 122	K282	Brake Repair Kit	162	K336	Brake Repair Kit	29	K500K	Brake Repair Kit	46
K109	Brake Repair Kit . 194, 219, 235		K283	Brake Repair Kit	162	K337	Cam Bushing Kit 32, 53, 130, 229		K501	Brake Repair Kit	30
K110	Brake Repair Kit	92	K284	Brake Repair Kit	163	K338	Brake Repair Kit	29	K502	Brake Repair Kit	121
K111	Brake Repair Kit	235	K285	Cam Bushing Kit	163	K339	Brake Repair Kit	44	K502K	Brake Repair Kit	121
K112	Brake Shoe Hold Down Kit	168, ... 170	K286	Brake Repair Kit	176	K342	Cam Bushing Kit	31, 230	K503	Cam Bushing Kit	127
			K287	Brake Repair Kit	163	K343	Cam Bushing Kit 47, 60, 137, 236, ...		K504	Brake Repair Kit	139, 165
K115	Brake Repair Kit . 193, 218, 234		K288	Brake Repair Kit	28				K504K	Brake Repair Kit	139, 165
K116	Brake Repair Kit . 194, 219, 235		K289	Cam Bushing Kit . 158, 173, 205, ... 206, 212					K505	Cam Bushing Kit	32, 48
K117	Brake Repair Kit 41, 56, 117, 132, ... 179, 200		K290	Cam Bushing Kit . 158, 173, 205					K506	Cam Bushing Kit	127
			K292	Brake Repair Kit	141, 143				K507	Cam Bushing Kit	33, 49, 93
K119	Brake Repair Kit	72, 92	K293	Brake Repair Kit	146						
K127	Brake Repair Kit	117	K293M	Brake Repair Kit	146						
K128	Brake Repair Kit 43, 57, 87, 118, ... 124, 134, 148, 180, 186, 202, ...	210	K295	Brake Repair Kit	76, 97						
			K296	Cam Bushing Kit	66, 68						
			K297	Brake Repair Kit	17						

# NUMERICAL LIST

Leland No.	Description	Page No.	Leland No.	Description	Page No.	Leland No.	Description	Page No.	Leland No.	Description	Page No.
K508	Cam Bushing Kit	33, 49, 93	L144A	Brake Block Bolts	314	L327	Brake Shoe Roller	321	L581	Camshaft-R.H.	358, 374, 386
K509	Cam Bushing Kit	33, 49, 93	L144C	Brake Block Bolts	314	L329	Camshaft Seal	414	L594	Anchor Pin Bushing	340
K510	Cam Bushing Kit	160, 174, 207, 213	L144E	Brake Block Bolts	314	L330	Camshaft Bushing	405	L595	Anchor Pin Bushing	340
K511	Cam Bushing Kit	160, 174, 207, 213	L144F	Brake Block Bolts	314	L331	Lock Ring	341, 413	L599	Camshaft Bushing	405
K512	Cam Bushing Kit	160, 207, 213	L144G	Brake Block Bolts	314	L333	Anchor Pin Felt	343	L726	Brake Shoe	300
K513	Cam Bushing Kit	15	L144H	Brake Block Bolts	314	L334	Anchor Pin Felt Retainer	343	L727	Brake Shoe	300
K514	Cam Bushing Kit	33, 49	L145	Roller Set Screw	315, 334	L336	Anchor Pin Adapter	341	L728	Anchor Pin	335
K543	Cam Bushing Kit	33, 49	L147	Anchor Pin Bushing	340	L344	Camshaft Washer	416	L733	Camshaft-R.H.	351
K1308E20	Brake Job Kit	297	L149	Brake Shoe Roller	318	L345	King Pin	425	L734	Camshaft-L.H.	351
K1308Q20	Brake Job Kit	297	L151	Brake Shoe Roller Retainer	315	L346	King Pin	425	L735	Camshaft-R.H.	352
K1308T20	Brake Job Kit	297	L152	Anchor Pin	337	L359	Camshaft Retainer	414	L736	Camshaft-L.H.	352
K4311E20	Brake Job Kit	298	L158	Brake Shoe Roller	318	L360	Camshaft Felt Seal	414	L738	Dust Shield	316
K4311E23	Brake Job Kit	298	L160	Axle Seal Assembly	291	L383	Brake Shoe Return Spring	324	L752	Camshaft Bushing	405
K4515FQ20	Brake Job Kit	299	L166	Camshaft Bushing	405	L385	Brake Shoe Return Spring	323	L754	Gasket	419
K4515FQ23	Brake Job Kit	299	L167	Camshaft Bushing 408, 410, 411	411	L389	Camshaft Bushing	405	L755	Plunger Guide	419
K4515FX320	Brake Job Kit	299	L168	Anchor Pin Retainer Screw	334	L397	Lock Ring	341, 413	L756	Brake Shoe Hold Clip	420
K4515FX323	Brake Job Kit	299	L173	Camshaft-R.H.	357, 377, 386	L402	Camshaft Bushing	406	L760	Anchor Plunger Boot	419
K4515Q20	Brake Job Kit	298, 299	L174	Camshaft-L.H.	357, 377, 386	L417	Brake Shoe Return Spring	323	L764	Spanner Nut	420
K4515Q23	Brake Job Kit	298, 299	L176	Axle Nut - Inner	274	L425	Anchor Pin Bushing	339	L767	Plunger Guide Spring	419
K4524Q20	Brake Job Kit	298	L177	Axle Washer	286	L426	Brake Shoe Roller	319	L768	Adjusting Guide	419
K4524Q23	Brake Job Kit	298	L178	Axle Nut - Outer	272	L428	Brake Shoe Roller	321	L769	Cap Screw	419
K4524MQ20	Brake Job Kit	297	L179	Brake Shoe Return Spring	325	L429	Brake Shoe Roller Pin	322	L773	Wedge Assembly	418
K4524MQ23	Brake Job Kit	297	L182	Anchor Pin	338	L430	Brake Shoe Roller	318	L781	Anchor Plunger - Right	418
K4591SFD20	Brake Job Kit	299	L182X	Anchor Pin	338	L438	Brake Spider	333	L782	Anchor Plunger - Left	418
K4591SFD23	Brake Job Kit	299	L183	Anchor Pin Bushing	339	L441	Brake Spider Flange	334	L784	Brake Shoe	308
K4692DFC20	Brake Job Kit	299	L192	Camshaft Washer	415	L444	Axle Seal	291	L786	Brake Shoe	313
K4692DFC23	Brake Job Kit	299	L193	Camshaft Washer	415	L445	Anchor Pin	335	L787	Brake Shoe	313
K4702Q20	Brake Job Kit	297	L195	Axle Nut	267	L451	Axle Seal	291	L788	Anchor Pin	337
K4707Q20	Brake Job Kit	298, 299	L196	Slack Adjuster	401	L453	Hub Cap Gasket	258	L827	Brake Shoe Return Spring	325
K4707Q23	Brake Job Kit	298, 299	L196EC	Slack Adjuster	401	L454	Hub Cap	258	L835	Brake Shoe Return Spring	327
K4709E20	Brake Job Kit	298	L202	Camshaft Washer	416	L455	Anchor Pin Lock	341	L838	Camshaft-L.H.	378
K4709E23	Brake Job Kit	298	L209	Axle Nut	269	L461	Landing Gear Crank	425	L839	Camshaft-R.H.	378
L9	Brake Lining Rivet	314	L210	Axle Washer	282	L465	Brake Shoe Return Spring	328	L840	Axle Nut - Outer	271
L10	Brake Lining Rivet	314	L211	Axle Washer	282	L467	Lock Ring	413	L841	Slack Adjuster	402
L11	Brake Lining Rivet	314	L219	Brake Spider Mount. Bolt	334	L470	Anchor Pin	337	L841EC	Slack Adjuster	402
L12	Brake Lining Rivet	314	L224	Camshaft-R.H.	358, 377, 386	L496	Brake Shoe Adapter	315	L845	Slack Adjuster	401
L100	Brake Shoe Roller	320	L225	Camshaft-L.H.	358, 377, 386	L501	Anchor Pin Bushing	340	L845EC	Slack Adjuster	401
L101	Brake Shoe Roller Pin	322	L234	Camshaft-R.H.	374, 386	L507	Camshaft-R.H.	385	L871	Glad Hand Seal	423
L103	Anchor Pin	337	L235	Camshaft-L.H.	374, 386	L508	Camshaft-L.H.	385	L872	Glad Hand	423
L105	Anchor Pin Seal	343	L238	Anchor Pin	336	L509	Anchor Pin Jam Nut	343	L877	Landing Gear Sand Shoe	425
L109	Anchor Pin Felt	343	L239	Anchor Pin Retainer	341	L511C	Brake Block Bolts	314	L878	Landing Gear Sand Shoe	425
L110	Anchor Pin Felt Retainer	343	L242	Camshaft Bracket	410	L511G	Brake Block Bolts	314	L879	Landing Gear Sand Shoe	425
L111	Anchor Pin Retainer	341	L250	Brake Shoe Roller	321	L511H	Brake Block Bolts	314	L885	Hub Cap	258
L112	Anchor Pin Bushing	339	L251	Brake Shoe Roller Pin	322	L512A	Brake Block Bolts	314	L888	Anchor Pin Bushing	340
L113	Anchor Pin	337	L254	Brake Shoe Return Spring	329	L512C	Brake Block Bolts	314	L889	Anchor Pin Washer	342, 415
L114	Anchor Pin	337	L260	Brake Shoe Roller	318	L512E	Brake Block Bolts	314	L891	Camshaft Bushing	405
L115	Brake Shoe Return Spring	326	L261	Camshaft-R.H.	357, 386	L512F	Brake Block Bolts	314	L893	Axle Washer	289
L116	Brake Shoe Return Spring	324	L262	Camshaft-L.H.	357, 386	L512G	Brake Block Bolts	314	L894	Brake Shoe Roller Retainer	315
L117	Camshaft Bushing	405	L263	Brake Block Bolts	314	L512H	Brake Block Bolts	314	L895	Camshaft Washer	416
L118	Anchor Pin Roller Retainer	341, 413	L264	Brake Block Bolts	314	L513	Brake Block Bolts	314	L896	Camshaft Bushing	406
L119	Brake Shoe Roller Pin	322	L266	Camshaft Bushing	406	L514	Brake Block Bolts	314	L897	Lock Ring	413
L120	Camshaft Washer	415	L294	Brake Shoe Roller	318	L515	Brake Block Bolts	314	L898	Camshaft Bushing	410
L124	Brake Shoe Roller	320	L296	Brake Shoe Roller	319	L516	Brake Block Bolts	314	L899	Camshaft Retainer Bracket	410
L126	Camshaft Felt Seal	414	L297	Brake Shoe Roller	319	L517	Brake Spider - Adjustable	333	L900	Camshaft-L.H.	366, 373
L127	Brake Shoe Roller	321	L298	Brake Shoe Roller Retainer	315	L519	Brake Spider Mount. Bolt	334	L901	Camshaft-R.H.	366, 373
L128	Brake Shoe Roller	320	L299	Camshaft Bushing	404	L556	Dust Shield	316	L902	Camshaft-R.H.	386
L130	Anchor Pin	337	L300	Camshaft Bushing	404	L559	Slack Adjuster	401	L903	Camshaft-L.H.	386
L135	Camshaft Retainer	414	L303	Camshaft Bushing	404	L562	Slack Adjuster	401	L964	Brake Shoe	313
L136	Anchor Pin Bushing	339	L304	Brake Shoe Wear Plate	313	L563	Slack Adjuster	401	L965	Brake Shoe	313
L137	Lock Ring	413	L306	Brake Chamber Bracket	423	L566	Anchor Pin Bushing	340	L966	Camshaft Seal	414
			L321	Anchor Pin	337	L573	Brake Shoe Return Spring	326	L967	Brake Shoe Return Spring	329
			L324	Shoe Return Spring Pin	331	L574	Brake Shoe Return Spring	326	L968	Brake Shoe Return Spring	328, 420
			L326	Brake Shoe Roller	321	L580	Camshaft-L.H.	358, 374, 386			

# NUMERICAL LIST

Leland No.	Description	Page No.	Leland No.	Description	Page No.	Leland No.	Description	Page No.	Leland No.	Description	Page No.
L970	Adjusting Piston .....	421	L1205	Camshaft -L.H. ....	385	L1355	Axle Nut - Inner .....	276	L1521	Drive Flange Stud .....	259
L971	Adjusting Nut .....	421	L1209	Anchor Pin .....	338	L1356	Axle Nut - Outer .....	277	L1522	Drive Flange Stud .....	259
L972	Adjusting Nut Cap .....	421	L1275	Slack Adjuster .....	401	L1357	Axle Washer .....	288	L1523	Drive Flange Stud .....	259
L973	Anchor Piston Assembly .....	421	L1276	Brake Chamber Bracket .....	423	L1358	Axle Nut - Inner .....	277	L1524	Drive Flange Stud .....	259
L975	Wedge Assembly .....	421	L1277	Anchor Pin .....	335	L1359	Axle Nut - Outer .....	273	L1525	Drive Flange Stud .....	259
L985	Wedge Assembly .....	418	L1278	Anchor Pin Link .....	343	L1360	Axle Lock Washer .....	285	L1526	Drive Flange Stud .....	259
L1010	Adjusting Screw Boot .....	421	L1279	Brake Shoe Return Spring .....	323	L1361	Axle Nut - Inner .....	273	L1527	Drive Flange Stud .....	259
L1011	Adjusting Nut Spring .....	421	L1280	Brake Shoe Roller .....	320	L1362	Axle Nut - Outer .....	275	L1528	Drive Flange Stud .....	259
L1012	Adjusting Lever Spring .....	421	L1281	Brake Shoe Roller Pin .....	322	L1363	Axle Lock Washer .....	287	L1529	Drive Flange Stud .....	259
L1013	Adjusting Lever .....	421	L1282	Brake Shoe .....	301	L1364	Axle Nut - Inner .....	275	L1530	Drive Flange Stud .....	259
L1014	Anchor Piston Boot .....	421	L1283	Brake Shoe .....	301	L1365	Axle Nut - Outer .....	276	L1531	Drive Flange Stud .....	259
L1017	Brake Lubricant .....	419	L1284	Anchor Pin Link .....	343	L1366	Axle Lock Washer .....	287	L1532	Drive Flange Stud .....	259
L1019	Plunger Housing .....	420	L1287	Anchor Pin Lock Washer .....	343	L1367	Axle Nut - Inner .....	276	L1533	Brake Shoe Roller .....	318
L1020	Brake Shoe Hold Down .....	420	L1288	Brake Shoe .....	307	L1368	Anchor Pin .....	335	L1534	Brake Shoe Roller .....	321
L1021	Spacer Sleeve .....	419	L1289	Brake Shoe .....	307	L1369	Anchor Pin Washer .....	342	L1535	Shoe Return Spring Pin .....	331
L1023	Camshaft -R.H. ....	378	L1291	Brake Shoe .....	313	L1370	Lock Ring .....	341, 413	L1536	Camshaft Bushing .....	405
L1024	Camshaft -L.H. ....	378	L1292	Brake Shoe .....	313	L1371	Camshaft Washer .....	416	L1537	Brake Shoe Roller Retainer .....	315
L1025	Axle Nut - Outer .....	271	L1293	Camshaft Seal .....	406	L1372	Camshaft Washer .....	416	L1539	Brake Lining Rivet .....	314
L1026	Axle Washer .....	284	L1294	Camshaft Bushing Sleeve .....	406	L1373	Anchor Pin Bushing .....	339	L1584	Brake Shoe .....	313
L1034	Brake Shoe Return Spring .....	323	L1295	Camshaft Seal .....	406	L1374	Air Tank Drain Valve .....	423	L1585	Anchor Pin .....	336
L1035	Brake Shoe Return Spring .....	328	L1296	Camshaft Bushing .....	406	L1375	Air Tank Safety Valve .....	423	L1586	Anchor Pin Retainer .....	342
L1039	Brake Shoe .....	313	L1298	Camshaft -R.H. ....	394	L1376	Air Tank Safety Valve .....	423	L1588	Brake Shoe Roller Pin .....	322
L1040	Brake Shoe .....	307	L1299	Camshaft -L.H. ....	394	L1377	Slack Adjuster .....	400	L1589	Camshaft Bracket Gasket .....	409
L1041	Brake Shoe .....	307	L1300	Adjusting Bolt .....	422	L1378	Slack Adjuster .....	400	L1594	Camshaft Bushing .....	409
L1042	Brake Shoe .....	313	L1301	Adjusting Bolt .....	422	L1379	Slack Adjuster .....	400	L1598	Camshaft Bushing .....	409
L1044	Brake Shoe .....	307	L1305	Camshaft Bushing Assembly .....	406	L1380	Slack Adjuster .....	400	L1600	Brake Shoe Roller .....	318
L1045	Brake Shoe .....	307	L1307	Camshaft Bushing .....	411	L1384	Camshaft -R.H. ....	366, 373	L1601	Brake Shoe .....	308
L1046	Adjusting Bolt .....	418	L1308	Slack Adjuster .....	402	L1385	Camshaft -L.H. ....	366, 373	L1602	Brake Shoe .....	308
L1047	Adjusting Screw Boot .....	419	L1308EC	Slack Adjuster .....	402	L1395	Axle Nut .....	278	L1603	Brake Shoe Return Spring .....	327
L1048	Automatic Adj. Sleeve .....	419	L1308E20	Lined Brake Shoe .....	297	L1412	Camshaft -R.H. ....	385	L1605	Brake Shoe .....	302
L1049	Automatic Adj. Plunger .....	418	L1308Q20	Lined Brake Shoe .....	297	L1413	Camshaft -L.H. ....	385	L1606	Lock Ring .....	413
L1050	Anchor Plunger - Left .....	418	L1308T20	Lined Brake Shoe .....	297	L1416	Anchor Pin .....	335	L1607	Cotter Pin .....	413
L1051	Anchor Plunger - Right .....	418	L1317	Adjusting Bolt .....	418	L1417	Brake Shoe Return Spring .....	329	L1608	Camshaft Washer .....	415
L1053	Plunger Guide .....	419	L1320	Camshaft Bushing .....	405	L1418	Brake Shoe Return Spring .....	325	L1609	Camshaft Washer .....	415
L1064	Wear Button .....	419	L1321	Brake Shoe .....	307	L1475	Brake Shoe Roller .....	319	L1611	Camshaft Seal .....	414
L1065	Brake Shoe Return Spring .....	328	L1327	Axle Lock Washer .....	286	L1476	Camshaft -R.H. ....	394	L1616	Brake Shoe Roller .....	320
	.....	422	L1328	Axle Nut .....	268	L1477	Camshaft -L.H. ....	394	L1617	Camshaft -R.H. ....	374
L1066	Adjusting Lever Pin .....	421	L1329	Axle Washer .....	280	L1478	Brake Shoe .....	312	L1618	Camshaft -L.H. ....	374
L1072	Camshaft -R.H. ....	374, 385	L1330	Axle Washer .....	280	L1480	Brake Shoe .....	308	L1619	Camshaft -R.H. ....	370
L1073	Camshaft -L.H. ....	374, 385	L1331	Axle Nut .....	268	L1481	Brake Shoe .....	308	L1620	Camshaft -L.H. ....	370
L1074	Camshaft -R.H. ....	351, 366	L1332	Axle Washer .....	281	L1482	Brake Shoe .....	306	L1621	Brake Shoe .....	300
L1075	Camshaft -L.H. ....	351, 366	L1333	Axle Washer .....	281	L1496	Anchor Pin .....	336	L1622	Brake Shoe Roller .....	321
L1080	Glad Hand .....	423	L1334	Axle Nut - Inner .....	268	L1497	Brake Lining Rivet .....	314	L1623	Brake Shoe Roller Pin .....	322
L1081	Glad Hand .....	423	L1335	Axle Nut - Outer .....	271	L1498	Anchor Pin Bushing .....	340	L1624	Brake Shoe Return Spring .....	330
L1082	Glad Hand Seal .....	423	L1336	Axle Washer .....	284	L1499	Anchor Plunger Boot .....	419	L1625	Brake Shoe Return Spring .....	327
L1162C	Brake Block Bolts .....	314	L1337	Axle Washer .....	284	L1502	Axle Flange Gasket .....	260	L1627	Shoe Return Spring Pin .....	331
L1162G	Brake Block Bolts .....	314	L1338	Axle Nut - Outer .....	269	L1503	Axle Flange Gasket .....	260	L1628	Camshaft -R.H. ....	374
L1162H	Brake Block Bolts .....	314	L1339	Axle Washer .....	282	L1504	Axle Flange Gasket .....	260	L1629	Camshaft -L.H. ....	374
L1178	Adjusting Screw Boot .....	419	L1340	Axle Nut - Outer .....	269	L1505	Axle Flange Gasket .....	260	L1630	Brake Shoe Return Spring .....	327
L1183	Adjusting Pawl Assembly .....	419	L1341	Axle Washer .....	282	L1506	Axle Flange Gasket .....	260	L1631	Camshaft -R.H. ....	370
L1184	Adjusting Guide .....	419	L1342	Axle Washer .....	282	L1507	Axle Flange Gasket .....	260	L1632	Camshaft -L.H. ....	370
L1185	Plunger Guide Spring .....	419	L1343	Axle Nut .....	270	L1508	Axle Flange Gasket .....	260	L1635	Brake Spider .....	332
L1186	Cap Screw .....	419	L1344	Axle Nut - Outer .....	272	L1509	Axle Flange Gasket .....	260	L1636	Brake Spider .....	332
L1188	Adjusting Bolt .....	418	L1345	Axle Washer .....	285	L1510	Axle Flange Gasket .....	260	L1637	Brake Spider .....	332
L1190	Brake Shoe .....	302	L1346	Axle Nut - Inner .....	272	L1511	Axle Flange Gasket .....	260	L1638	Brake Spider .....	332
L1191	Camshaft Bushing .....	410	L1347	Axle Nut - Outer .....	273	L1513	Drive Flange Wedge .....	261	L1639	Brake Spider .....	332
L1193	Camshaft -R.H. ....	374	L1348	Axle Washer .....	285	L1514	Drive Flange Wedge .....	261	L1640	Brake Spider .....	332
L1194	Camshaft -L.H. ....	374	L1349	Axle Nut - Inner .....	273	L1515	Drive Flange Wedge .....	261	L1641	Camshaft Bushing .....	406
L1198	Camshaft Bracket Assembly .....	408	L1350	Axle Nut - Outer .....	275	L1516	Drive Flange Wedge .....	261	L1642	Camshaft Bracket Assembly .....	412
L1199	Camshaft Bushing .....	408	L1351	Axle Washer .....	287	L1517	Drive Flange Wedge .....	261	L1643	Brake Shoe .....	307
L1202	Camshaft -R.H. ....	370	L1352	Axle Nut - Inner .....	275	L1518	Drive Flange Wedge .....	261	L1644	Brake Shoe .....	307
L1203	Camshaft -L.H. ....	370	L1353	Axle Nut - Outer .....	275	L1519	Drive Flange Stud .....	259	L1645	Brake Shoe .....	300
L1204	Camshaft -R.H. ....	385	L1354	Axle Washer .....	287	L1520	Drive Flange Stud .....	259	L1646	Brake Shoe Roller .....	319

# NUMERICAL LIST

Leland No.	Description	Page No.	Leland No.	Description	Page No.	Leland No.	Description	Page No.	Leland No.	Description	Page No.
L1648	Slack Adjuster	402	L1741	Camshaft-R.H.	380	L1935	Axle Nut Wrench	290	L2403	Camshaft-R.H.	385
L1648EC	Slack Adjuster	402	L1742	Camshaft-L.H.	380	L1936	Axle Nut Wrench	290	L2404	Camshaft-L.H.	385
L1649	Camshaft Bracket	412	L1743	Camshaft Washer	415	L1937	Axle Nut Wrench	290	L2430	Camshaft Bushing	406
L1650	Brake Shoe Return Spring	325, 420	L1744	Camshaft Seal	414	L1940	Axle Nut Wrench	290	L2435	Brake Shoe	311
L1651	Camshaft-R.H.	393	L1745	Camshaft Washer	415	L1941	Axle Nut Wrench	290	L2438	Camshaft-R.H.	386
L1652	Camshaft-L.H.	393	L1746	Camshaft Bushing	404	L1942	Thread Chaser	290	L2439	Camshaft-L.H.	386
L1653	Camshaft-R.H.	393	L1747	Camshaft Washer	415	L1943	Thread Chaser	290	L2440	Camshaft-R.H.	357
L1654	Camshaft-L.H.	393	L1748	Camshaft Washer	415	L1948	Anchor Pin Removal Tool	338	L2441	Camshaft-L.H.	357
L1655	Camshaft-R.H.	393	L1751	Anchor Pin Washer	342	L1949	Flange Wedge Pliers	261	L2442	Camshaft-R.H.	357
L1656	Camshaft-L.H.	393	L1752	Anchor Pin Nut	342	L2035	Brake Shoe	308	L2443	Camshaft-L.H.	357
L1657	Camshaft-R.H.	394	L1753	Camshaft Washer	416	L2036	Slack Adjuster	400	L2448	Camshaft-R.H.	385
L1658	Camshaft-L.H.	394	L1755	Anchor Pin Retainer	341	L2037	Slack Adjuster	400	L2449	Camshaft-L.H.	385
L1664	Brake Spider	332	L1756	Anchor Pin	335	L2047	Brake Shoe	312	L2450	Camshaft-R.H.	385
L1665	Brake Spider	332	L1758	Anchor Pin Lock	342	L2048	Brake Shoe	312	L2451	Camshaft-L.H.	385
L1666	Brake Spider	332	L1760	Brake Shoe	306	L2089	Camshaft-R.H.	358	L2452	Camshaft-R.H.	385
L1668	Brake Spider	332	L1762	Cotter Pin	289	L2090	Camshaft-L.H.	358	L2453	Camshaft-L.H.	385
L1670	Lock Ring	341, 413	L1765	Brake Shoe Return Spring	328, 422	L2093	Drive Flange Stud	259	L2456	Camshaft-L.H.	385
L1671	Guide Washer	316	L1766	Camshaft Bushing Sleeve	405	L2094	Drive Flange Stud	259	L2457	Camshaft-L.H.	385
L1672	Brake Shoe Return Spring	329	L1767	Camshaft Bushing	405	L2095	Drive Flange Stud	259	L2460	Camshaft-R.H.	383
L1673	Hold Down Spring Washer	316	L1768	Camshaft Bushing Seal	405	L2099	Axle Nut - Inner	271	L2461	Camshaft-L.H.	383
L1674	Hold Down Washer	316	L1769	Brake Shoe Return Spring	325, 422	L2218	Brake Shoe Roller Retainer	315	L2462	Camshaft-R.H.	383
L1680	Camshaft Bushing	404	L1770	Camshaft Seal	414	L2223	Brake Shoe	310	L2463	Camshaft-L.H.	383
L1681	Camshaft Washer	415	L1782	Brake Shoe Return Spring	323	L2338	Camshaft-R.H.	387	L2464	Camshaft-R.H.	383
L1683	Anchor Pin	336	L1783	Brake Shoe Roller	320	L2339	Camshaft-L.H.	387	L2465	Camshaft-L.H.	383
L1686	Camshaft Bushing	404	L1785	Backing Plate Plug	419	L2340	Camshaft-R.H.	387	L2466	Camshaft-R.H.	374
L1687	Camshaft Seal	414	L1790	Clevis Pin Bushing	402	L2341	Camshaft-L.H.	387	L2467	Camshaft-L.H.	374
L1688	Brake Shoe	305	L1791	Axle Flange Gasket	260	L2342	Camshaft-R.H.	388	L2468	Camshaft-R.H.	351
L1689	Brake Shoe	305	L1901	Axle Nut Wrench	290	L2343	Camshaft-L.H.	388	L2469	Camshaft-L.H.	351
L1690	Camshaft Seal	414	L1902	Axle Nut Wrench	290	L2346	Brake Shoe	303	L2470	Camshaft-R.H.	351
L1691	Brake Shoe Roller	319	L1903	Axle Nut Wrench	290	L2347	Camshaft-R.H.	392	L2471	Camshaft-L.H.	351
L1693	Brake Shoe Return Spring	327	L1904	Axle Nut Wrench	290	L2348	Camshaft-L.H.	392	L2472	Camshaft-R.H.	351
L1695	Brake Shoe Return Spring	324	L1905	Axle Nut Wrench	290	L2349	Slack Adjuster	402	L2473	Camshaft-L.H.	351
L1696	Brake Shoe Roller	318	L1906	Axle Nut Wrench	290	L2351	Brake Shoe Return Spring	324	L2476	Camshaft-R.H.	352
L1697	Brake Shoe Roller Retainer	315	L1907	Axle Nut Wrench	290	L2352	Brake Shoe Roller	321	L2477	Camshaft-L.H.	352
L1698	Camshaft-R.H.	377	L1908	Axle Nut Wrench	290	L2353	Brake Shoe Roller Pin	322	L2482	Camshaft-R.H.	370
L1699	Camshaft-L.H.	377	L1909	Axle Nut Wrench	290	L2354	Brake Shoe	312	L2483	Camshaft-L.H.	370
L1700	Hub Cap "O" Ring	258	L1910	Axle Nut Wrench	290	L2355	Brake Shoe	312	L2484	Camshaft-R.H.	370
L1701	Hub Cap Plug	258	L1911	Axle Nut Wrench	290	L2356	Camshaft-R.H.	358	L2485	Camshaft-L.H.	370
L1706	Brake Shoe Stabilizer	422	L1912	Axle Nut Wrench	290	L2357	Camshaft-L.H.	358	L2494	Slack Adjuster	400
L1707	Brake Shoe Stabilizer	422	L1913	Axle Nut Wrench	290	L2364	Anchor Pin	336	L2495	Slack Adjuster	400
L1708	Wedge Assembly	421	L1914	Axle Nut Wrench	290	L2367	Anchor Pin Retainer	342	L2580	Axle Nut	266
L1709	Wedge Assembly	421	L1915	Axle Nut Wrench	290	L2368	Anchor Pin	335	L2581	Axle Washer	279
L1710	Wedge Assembly	421	L1916	Axle Nut Wrench	290	L2369	Brake Shoe	308	L2582	Axle Nut	266
L1711	Camshaft Bushing	408	L1917	Axle Nut Wrench	290	L2370	Brake Shoe Return Spring	325	L2583	Axle Washer	279
L1716	Brake Shoe Roller	320	L1918	Axle Nut Wrench	290	L2371	Land. Gear Sand Shoe Axle	425	L2584	Axle Nut	266
L1718	Camshaft Bracket Assembly	408	L1919	Axle Nut Wrench	290	L2372	Landing Gear Wheel Axle	425	L2585	Axle Washer	279
L1719	Camshaft Washer	417	L1920	Axle Nut Wrench	290	L2373	Axle Washer	287	L2586	Axle Nut	267
L1720	Camshaft-R.H.	383	L1921	Axle Nut Wrench	290	L2374	Axle Nut - Inner	274	L2587	Axle Lock Washer	279
L1721	Camshaft-L.H.	383	L1922	Axle Nut Wrench	290	L2375	Axle Washer	286	L2588	Axle Nut	267
L1724	Camshaft Washer	416	L1923	Axle Nut Wrench	290	L2376	Axle Nut - Inner	274	L2589	Axle Washer	280
L1726	Camshaft Seal	414	L1924	Axle Nut Wrench	290	L2377	Axle Nut - Outer	274	L2590	Axle Nut	267
L1729	Camshaft Seal	411	L1925	Axle Nut Wrench	290	L2378	Axle Nut - Outer	274	L2592	Axle Nut	270
L1730	Camshaft Bushing	411	L1926	Axle Nut Wrench	290	L2379	Camshaft-R.H.	377	L2593	Axle Lock Washer	283
L1732	Brake Shoe	304	L1927	Axle Nut Wrench	290	L2380	Camshaft-L.H.	377	L2594	Axle Lock Washer	283
L1733	Brake Shoe	304	L1928	Axle Nut Wrench	290	L2381	Return Spring Pliers	330	L2595	Axle Lock Washer	283
L1734	Brake Shoe Return Spring	324	L1929	Axle Nut Wrench	290	L2381A	Spring Tool Rep. Tip	330	L2596	Axle Nut	270
L1735	O Ring	411	L1930	Axle Nut Wrench	290	L2382	Camshaft Bushing	406	L2599	Axle Nut	271
L1736	Anchor Pin	336	L1931	Axle Nut Wrench	290	L2387	Camshaft Bracket Caps	408	L2600	Axle Lock Washer	285
L1737	Camshaft-R.H.	380	L1932	Axle Nut Wrench	290	L2395	Brake Shoe	307	L2601	Axle Nut	272
L1738	Camshaft-L.H.	380	L1933	Axle Nut Wrench	290	L2399	Brake Shoe	308	L2602	Axle Lock Washer	285
L1739	Camshaft-R.H.	380	L1934	Axle Nut Wrench	290	L2400	Brake Shoe	307	L2604	Axle Lock Washer	286
L1740	Camshaft-L.H.	380				L2401	Camshaft-R.H.	386	L2612	Axle Nut	266
						L2402	Camshaft-L.H.	386	L2613	Axle Nut	267

# NUMERICAL LIST

Leland No.	Description	Page No.	Leland No.	Description	Page No.	Leland No.	Description	Page No.	Leland No.	Description	Page No.
L2614	Axle Nut	268	L2880	Camshaft-R.H.	387	L2973	Camshaft-L.H.	371	L3045	Camshaft-L.H.	361
L2615	Axle Washer	281	L2881	Camshaft-L.H.	387	L2974	Camshaft-R.H.	371	L3046	Camshaft-R.H.	361
L2616	Axle Nut	270	L2882	Camshaft-R.H.	388	L2975	Camshaft-L.H.	371	L3047	Camshaft-L.H.	361
L2617	Axle Lock Washer	283	L2883	Camshaft-L.H.	388	L2976	Camshaft-R.H.	371	L3048	Brake Shoe	301
L2618	Axle Nut	270	L2884	Camshaft-R.H.	388	L2977	Camshaft-L.H.	371	L3049	Clevis Assembly	403
L2619	Axle Nut	272	L2885	Camshaft-L.H.	388	L2978	Camshaft-R.H.	372	L3050	Camshaft-R.H.	388
L2620	Axle Nut	273	L2886	Camshaft-R.H.	388	L2979	Camshaft-L.H.	372	L3051	Camshaft-L.H.	388
L2621	Axle Nut	266	L2887	Camshaft-L.H.	388	L2980	Camshaft Bracket Spacer	417	L3052	Automatic Adj. Plunger	418
L2622	Axle Washer	279	L2888	Camshaft-R.H.	388	L2981	Brake Shoe	309	L3053	Adjusting Actuator	419
L2663	Brake Shoe	307	L2889	Camshaft-L.H.	388	L2982	Brake Shoe	302	L3054	Adjusting Pawl Assembly	419
L2664	Brake Shoe	307	L2890	Camshaft-R.H.	388	L2983	Brake Shoe Roller	321	L3055	Adjusting Plunger Assem.	418
L2670	Brake Shoe	310	L2891	Camshaft-L.H.	388	L2984	Brake Shoe Roller Pin	322	L3056	Brake Spider Gasket	417
L2671	Brake Shoe	310	L2892	Camshaft-R.H.	388	L2985	Brake Shoe Return Spring	327	L3057	Camshaft Washer	417
L2707	Camshaft Bracket Assembly	410	L2893	Camshaft-L.H.	388	L2987	Anchor Pin	338	L3058	Camshaft Washer	416
L2711	Camshaft Support Bracket	410	L2897	Camshaft-R.H.	359	L2988	Camshaft-R.H.	373	L3059	Automatic Slack Adjuster	397
L2712	Camshaft Bracket	411	L2898	Camshaft-L.H.	359	L2989	Camshaft-L.H.	373	L3060	Automatic Slack Adjuster	397
L2713	Camshaft Bracket	411	L2900	Lock Ring	413	L2992	Brake Shoe	306	L3063	Clevis Assembly	403
L2714	Camshaft Bracket Assembly	410	L2901	Brake Shoe Roller	320	L2993	Brake Shoe Return Spring	325	L3064	Clevis Assembly	403
L2794	Thread Chaser Rep. Teeth	290	L2916	Brake Shoe	301	L2994	Brake Shoe Return Spring	329	L3065	Automatic Slack Adjuster	397
L2795	Thread Chaser Rep. Teeth	290	L2917	Brake Shoe	301	L2995	Anchor Pin Bushing	339	L3066	Automatic Slack Adjuster	397
L2804	Brake Shoe	305	L2918	Brake Shoe	301	L2996	Anchor Pin	335	L3067	Brake Shoe Return Spring	324
L2805	Brake Shoe	305	L2921	Hub Cap	258	L3003	Automatic Slack Adjuster	397	L3068	Camshaft Washer	416
L2808	Brake Shoe	303	L2926	Camshaft Washer	415, 416	L3004	Automatic Slack Adjuster	397	L3069	Brake Shoe Return Spring	325
L2811	Brake Shoe Roller	319	L2927	Camshaft Washer	417	L3005	Automatic Slack Adjuster	397	L3070	Brake Shoe	305
L2820	Camshaft-R.H.	385	L2928	Camshaft Washer	416	L3006	Automatic Slack Adjuster	397	L3072	Camshaft-R.H.	361
L2821	Camshaft-L.H.	385	L2929	Brake Shoe	304	L3007	Automatic Slack Adjuster	397	L3073	Camshaft-L.H.	361
L2825	Brake Shoe Return Spring	328	L2930	Anchor Pin	336	L3008	Automatic Slack Adjuster	397	L3074	Camshaft-R.H.	371
L2827	Brake Shoe Hold Down	316	L2931	Brake Shoe Return Spring	324	L3009	Automatic Slack Adjuster	397	L3075	Camshaft-L.H.	371
L2828	Brake Shoe Hold Down	316	L2932	Brake Shoe Return Spring	329	L3010	Automatic Slack Adjuster	397	L3076	Camshaft-R.H.	371
L2829	Brake Shoe Return Spring	324	L2933	Anchor Pin Washer	342	L3011	Brake Shoe	312	L3077	Camshaft-L.H.	371
L2830	Camshaft Seal	414	L2934	Anchor Pin Wear Plate	343	L3012	Brake Shoe	309	L3078	Camshaft-R.H.	372
L2831	Camshaft Bushing	404	L2938	Camshaft Seal	414	L3013	Brake Shoe	310	L3079	Camshaft-L.H.	372
L2832	Camshaft Washer	415	L2939	Camshaft Bushing	404	L3014	Brake Shoe	302	L3080	Camshaft-R.H.	382
L2833	Camshaft Washer	415	L2940	Lock Ring	413	L3015	Brake Shoe	302	L3081	Camshaft-L.H.	382
L2834	Camshaft-R.H.	368	L2941	Camshaft Seal	414	L3016	Brake Shoe	303	L3082	Camshaft-R.H.	382
L2835	Camshaft-L.H.	368	L2942	Camshaft Bushing	406	L3017	Brake Shoe	300	L3083	Camshaft-L.H.	382
L2836	Camshaft-R.H.	368	L2943	Brake Shoe Roller	321	L3018	Brake Shoe Roller	320	L3084	Camshaft-R.H.	382
L2837	Camshaft-L.H.	368	L2944	Camshaft Washer	415	L3019	Brake Shoe Roller Pin	322	L3085	Camshaft-L.H.	382
L2838	Camshaft-R.H.	368	L2945	Camshaft Washer	417	L3020	Brake Shoe	310	L3086	Camshaft-R.H.	382
L2839	Camshaft-L.H.	368	L2946	Anchor Pin Lock Nut	342	L3021	Anchor Pin Roller Lock	315	L3087	Camshaft-L.H.	382
L2842	Brake Shoe	307	L2947	Camshaft Washer	416	L3022	Brake Shoe Return Spring	323	L3088	Camshaft-R.H.	384
L2843	Brake Shoe Return Spring	326	L2948	Camshaft-R.H.	358	L3023	Anchor Pin	337	L3089	Camshaft-L.H.	384
L2844	Camshaft-R.H.	358	L2949	Camshaft-L.H.	358	L3024	Anchor Pin Bushing	339	L3090	Camshaft-R.H.	389
L2845	Camshaft-L.H.	358	L2950	Brake Shoe	311	L3025	Anchor Pin Lock	341	L3091	Camshaft-L.H.	389
L2846	Camshaft-R.H.	388	L2951	Brake Shoe	311	L3026	Camshaft-R.H.	375	L3092	Camshaft-R.H.	389
L2847	Camshaft-L.H.	388	L2952	Anchor Pin	335	L3027	Camshaft-L.H.	375	L3093	Camshaft-L.H.	389
L2854	Camshaft Bracket Assembly	412	L2953	Brake Shoe Return Spring	330	L3028	Brake Shoe Return Spring	326, 420	L3094	Camshaft-R.H.	389
L2856	Brake Shoe Return Spring	329, 420	L2954	Brake Shoe Roller	319	L3029	Camshaft Bushing	404	L3095	Camshaft-L.H.	389
L2858	Brake Shoe Return Spring	330	L2955	Brake Shoe Retainer Spring	331	L3030	Camshaft-R.H.	361	L3096	Camshaft-R.H.	389
L2859	Shoe Spring Retainer	331	L2956	Axle Flange Gasket	260	L3031	Camshaft-L.H.	361	L3097	Camshaft-L.H.	389
L2868	Camshaft-R.H.	387	L2957	Drive Flange Wedge	261	L3032	Anchor Pin	336	L3098	Camshaft-R.H.	389
L2869	Camshaft-L.H.	387	L2958	Drive Flange Wedge	261	L3033	Camshaft Bushing	412	L3099	Camshaft-L.H.	389
L2870	Camshaft-R.H.	387	L2959	Drive Flange Stud	259	L3034	Camshaft-R.H.	387	L3100	Camshaft-R.H.	390
L2871	Camshaft-L.H.	387	L2960	Brake Shoe Roller	318	L3035	Camshaft-L.H.	387	L3101	Camshaft-L.H.	390
L2872	Camshaft-R.H.	387	L2961	Brake Shoe Roller Retainer	315	L3036	Camshaft-R.H.	391	L3102	Camshaft-R.H.	390
L2873	Camshaft-L.H.	387	L2963	Camshaft Washer	417	L3037	Camshaft-L.H.	391	L3103	Camshaft-L.H.	390
L2874	Camshaft-R.H.	387	L2966	Camshaft-R.H.	375	L3038	Camshaft-R.H.	389	L3104	Camshaft-R.H.	390
L2875	Camshaft-L.H.	387	L2967	Camshaft-L.H.	375	L3039	Camshaft-L.H.	389	L3105	Camshaft-L.H.	390
L2876	Camshaft-R.H.	387	L2968	Camshaft-R.H.	375	L3040	Camshaft Bracket Assembly	410	L3106	Camshaft-R.H.	390
L2877	Camshaft-L.H.	387	L2969	Camshaft-L.H.	375	L3042	Camshaft Bracket Screw	412	L3107	Camshaft-R.H.	390
L2878	Camshaft-R.H.	387	L2970	Camshaft-R.H.	371	L3043	Camshaft Bushing	412	L3109	Camshaft-L.H.	390
L2879	Camshaft-L.H.	387	L2971	Camshaft-L.H.	371	L3044	Camshaft-R.H.	361	L3110	Camshaft-R.H.	390
			L2972	Camshaft-R.H.	371						

# NUMERICAL LIST

Leland No.	Description	Page No.	Leland No.	Description	Page No.	Leland No.	Description	Page No.	Leland No.	Description	Page No.
L3111	Camshaft-L.H.	390	L3182	Dust Shield	316	L3249	Camshaft-L.H.	369	L3312	Camshaft-R.H.	382
L3112	Camshaft-R.H.	395	L3183	Brake Shoe Return Spring	326	L3250	Camshaft-R.H.	369	L3313	Camshaft-L.H.	382
L3113	Camshaft-L.H.	395	L3184	CamshaftBracketAssembly	409	L3251	Camshaft-L.H.	369	L3314	Camshaft-R.H.	378
L3114	Camshaft-R.H.	395	L3185	CamshaftBracketAssembly	409	L3252	Camshaft-R.H.	369	L3315	Camshaft-L.H.	378
L3115	Camshaft-L.H.	395	L3186	Camshaft-R.H.	350	L3253	Camshaft-L.H.	369	L3316	Camshaft-R.H.	378
L3116	Camshaft-R.H.	395	L3187	Camshaft-L.H.	350	L3254	Camshaft-R.H.	354	L3317	Camshaft-L.H.	378
L3117	Camshaft-L.H.	395	L3188	Camshaft-R.H.	350	L3255	Camshaft-L.H.	354	L3318	Camshaft-R.H.	378
L3118	Brake Shoe Return Spring	326	L3189	Camshaft-L.H.	350	L3256	Camshaft-R.H.	369	L3319	Camshaft-L.H.	378
L3122	Drive Flange Stud	259	L3190	Camshaft-R.H.	369	L3257	Camshaft-L.H.	369	L3320	Camshaft-R.H.	365
L3123	Clevis Assembly	403	L3191	Camshaft-L.H.	369	L3258	Camshaft-R.H.	354	L3321	Camshaft-L.H.	365
L3124	Camshaft-R.H.	360	L3192	Camshaft-R.H.	369	L3259	Camshaft-L.H.	354	L3322	Camshaft-R.H.	381
L3125	Camshaft-L.H.	360	L3193	Camshaft-L.H.	369	L3260	Camshaft-R.H.	354	L3323	Camshaft-L.H.	381
L3126	Brake Shoe Return Spring	326	L3194	Camshaft-R.H.	369	L3261	Camshaft-L.H.	354	L3324	Camshaft-R.H.	381
L3127	Camshaft Bushing	406	L3195	Camshaft-L.H.	369	L3262	Camshaft-R.H.	355	L3325	Camshaft-L.H.	381
L3128	CamshaftBracketAssembly	408	L3196	Camshaft-R.H.	369	L3263	Camshaft-L.H.	355	L3326	Camshaft-R.H.	381
L3129	CamshaftBracketAssembly	408	L3197	Camshaft-L.H.	369	L3264	Camshaft-R.H.	354	L3327	Camshaft-L.H.	381
L3130	Camshaft-R.H.	353	L3198	Camshaft-R.H.	369	L3265	Camshaft-L.H.	354	L3328	Camshaft-R.H.	387
L3131	Camshaft-L.H.	353	L3199	Camshaft-L.H.	369	L3266	Camshaft-R.H.	355	L3329	Camshaft-L.H.	387
L3132	Camshaft-R.H.	353	L3200	Camshaft-R.H.	376	L3267	Camshaft-L.H.	355	L3330	Camshaft-R.H.	388
L3133	Camshaft-L.H.	353	L3201	Camshaft-L.H.	376	L3268	Camshaft-R.H.	356	L3331	Camshaft-L.H.	388
L3134	Camshaft-R.H.	353	L3202	Camshaft-R.H.	376	L3269	Camshaft-L.H.	356	L3332	Camshaft-R.H.	388
L3135	Camshaft-L.H.	353	L3203	Camshaft-L.H.	376	L3270	Camshaft-R.H.	355	L3333	Camshaft-L.H.	388
L3136	Camshaft-R.H.	352	L3204	Axle Nut - Inner	278	L3271	Camshaft-L.H.	355	L3334	Camshaft-R.H.	388
L3137	Camshaft-L.H.	352	L3205	Axle Washer	289	L3272	Camshaft-R.H.	356	L3335	Camshaft-L.H.	388
L3138	Camshaft-R.H.	353	L3206	Axle Nut	277	L3273	Camshaft-L.H.	356	L3336	Camshaft-R.H.	388
L3139	Camshaft-L.H.	353	L3207	Brake Shoe	306	L3274	Camshaft-R.H.	356	L3337	Camshaft-L.H.	388
L3140	Camshaft-R.H.	352	L3208	Anchor Pin	336	L3275	Camshaft-L.H.	356	L3338	Camshaft-R.H.	390
L3141	Camshaft-L.H.	352	L3209	Axle Washer	284	L3276	Camshaft-R.H.	356	L3339	Camshaft-L.H.	390
L3142	Camshaft-R.H.	353	L3210	Axle Washer	283	L3277	Camshaft-L.H.	356	L3340	Camshaft-R.H.	390
L3143	Camshaft-L.H.	353	L3211	Axle Nut	276	L3278	Camshaft-R.H.	363	L3341	Camshaft-L.H.	390
L3144	Camshaft-R.H.	370	L3212	Axle Lock Washer	288	L3279	Camshaft-L.H.	363	L3342	Camshaft-R.H.	384
L3145	Camshaft-L.H.	370	L3213	Axle Lock Washer	286	L3280	Camshaft-R.H.	363	L3343	Camshaft-L.H.	384
L3146	Camshaft Bushing	408	L3214	Axle Nut - Inner	276	L3281	Camshaft-L.H.	363	L3344	Camshaft-R.H.	390
L3147	Brake Shoe	302	L3215	Axle Washer	288	L3282	Camshaft-R.H.	364	L3345	Camshaft-L.H.	390
L3148	Brake Shoe Return Spring	323	L3216	Axle Lock Washer	288	L3283	Camshaft-L.H.	364	L3346	Camshaft-R.H.	392
L3154	CamshaftBracketAssembly	408	L3217	Axle Nut Wrench	290	L3284	Camshaft-R.H.	364	L3347	Camshaft-L.H.	392
L3155	CamshaftBracketAssembly	408	L3218	Axle Nut Wrench	290	L3285	Camshaft-L.H.	364	L3348	Camshaft-R.H.	384
L3156	Brake Shoe	302	L3219	Axle Lock Washer	288	L3286	Camshaft-R.H.	364	L3349	Camshaft-L.H.	384
L3157	Brake Shoe	302	L3220	Brake Shoe	305	L3287	Camshaft-L.H.	364	L3350	Camshaft-R.H.	389
L3158	Brake Shoe	302	L3221	Axle Nut - Inner	278	L3288	Camshaft-R.H.	364	L3351	Camshaft-L.H.	389
L3159	Brake Shoe	302	L3222	Axle Lock Washer	289	L3289	Camshaft-L.H.	364	L3352	Automatic Slack Adjuster	397
L3160	Dust Shield	317	L3223	Axle Nut - Outer	277	L3290	Camshaft-R.H.	360	L3353	Brake Shoe	308
L3161	Automatic Slack Adjuster	397	L3224	CamshaftBoss Housing	412	L3291	Camshaft-L.H.	360	L3354	Brake Shoe	302
L3162	Glad Hand Seal	423	L3225	Slack Adjuster	400	L3292	Camshaft-R.H.	360	L3355	Brake Shoe	302
L3163	Glad Hand Seal	423	L3226	ABS Sensor Bracket	334	L3293	Camshaft-L.H.	360	L3357	Brake Shoe	302
L3164	Glad Hand Seal	423	L3227	ABS Sensor Bracket	334	L3294	Camshaft-R.H.	372	L3358	Camshaft-R.H.	360
L3165	Glad Hand	423	L3228	CamshaftBracketAssembly	411	L3295	Camshaft-L.H.	372	L3359	Camshaft-L.H.	360
L3166	Brake Shoe Guide	316	L3229	CamshaftBracketAssembly	411	L3296	Camshaft-R.H.	372	L3360	Brake Shoe	306
L3167	Brake Shoe Guide	316	L3231	CamshaftBracketCap Assy.	411	L3297	Camshaft-L.H.	372	L3361	Brake Shoe	311
L3168	CamshaftBracketAssembly	409	L3232	CamshaftBracketCap	411	L3298	Camshaft-R.H.	372	L3362	Brake Shoe	302
L3169	CamshaftBracketAssembly	409	L3233	CamshaftBracketCap	411	L3299	Camshaft-L.H.	372	L3363	CamshaftWasher	417
L3170	Camshaft-R.H.	354	L3236	Axle Lock Washer	284	L3300	Camshaft-R.H.	372	L3364	Camshaft Lock Ring	413
L3171	Camshaft-L.H.	354	L3237	Brake Shoe	305	L3301	Camshaft-L.H.	372	L3365	Brake Shoe	309
L3172	Brake Shoe	304	L3238	Brake Shoe	305	L3302	Camshaft-R.H.	352	L3366	Brake Shoe	309
L3173	Brake Shoe Return Spring	328	L3239	Brake Shoe	305	L3303	Camshaft-L.H.	352	L3367	Brake Shoe	309
L3174	Brake Shoe	304	L3240	Camshaft-R.H.	361	L3304	Camshaft-R.H.	353	L3368	Brake Shoe	309
L3175	Brake Shoe Return Spring	327	L3241	Camshaft-L.H.	361	L3305	Camshaft-L.H.	353	L3369	Brake Shoe Return Spring	328
L3176	Automatic Slack Tool	403	L3243	CamshaftBracket	411	L3306	Camshaft-R.H.	360	L3370	Brake Shoe Return Spring	327
L3177	Slack Adjuster Tool	403	L3244	Camshaft-R.H.	369	L3307	Camshaft-L.H.	360	L3373	Spring Connector	331
L3178	CamshaftWasher	416	L3245	Camshaft-L.H.	369	L3308	Camshaft-R.H.	362	L3374	Camshaft-R.H.	362
L3179	CamshaftWasher	415	L3246	Camshaft-R.H.	369	L3309	Camshaft-L.H.	362	L3375	Camshaft-L.H.	362
L3180	Slack Adjuster Tool	403	L3247	Camshaft-L.H.	369	L3310	Camshaft-R.H.	362	L3376	Camshaft-R.H.	362
L3181	Axle Nut Wrench	290	L3248	Camshaft-R.H.	369	L3311	Camshaft-L.H.	362	L3377	Camshaft-L.H.	362

# NUMERICAL LIST

Leland No.	Description	Page No.	Leland No.	Description	Page No.	Leland No.	Description	Page No.	Leland No.	Description	Page No.
L3378	Camshaft - R.H.	365	L3494	Camshaft - R.H.	382	L3571	Axle Washer	280	L4524MQ23	Lined Brake Shoe	297
L3379	Camshaft - L.H.	365	L3495	Camshaft - L.H.	382	L3572	Thread Chaser Rep. Teeth	290	L4591SFD20	Lined Brake Shoe	299
L3380	Camshaft - R.H.	360	L3496	Camshaft - R.H.	371	L3573	Spring Tool	330	L4591SFD23	Lined Brake Shoe	299
L3381	Camshaft - L.H.	360	L3497	Camshaft - L.H.	371	L3574	Camshaft - R.H.	390	L4692DFC20	Lined Brake Shoe	299
L3382	Axle Flange Gasket	260	L3498	Camshaft - R.H.	356	L3575	Camshaft - L.H.	390	L4692DFC23	Lined Brake Shoe	299
L3385	Brake Shoe	312	L3499	Camshaft - L.H.	356	L3576	Camshaft - R.H.	381	L4702Q20	Lined Brake Shoe	297
L3386	Brake Shoe	312	L3501	Brake Shoe Return Spring	328	L3577	Camshaft - L.H.	381	L4702Q23	Lined Brake Shoe	297
L3387	Brake Shoe	312	L3504	Brake Shoe Return Spring	324	L3578	Camshaft - R.H.	381	L4707Q20	Lined Brake Shoe	298, 299
L3388	Brake Shoe	312	L3505	Brake Shoe	303	L3579	Camshaft - L.H.	381	L4707Q23	Lined Brake Shoe	298, 299
L3389	Brake Shoe	312	L3506	Camshaft - R.H.	390	L3580	Camshaft - R.H.	381			
L3391	King Pin Lock	425	L3507	Camshaft - L.H.	390	L3581	Camshaft - L.H.	381			
L3392	Camshaft - R.H.	360	L3508	Camshaft - R.H.	361	L3582	Camshaft - R.H.	372	L4708EQ20	Lined Brake Shoe	298
L3393	Camshaft - L.H.	360	L3509	Camshaft - L.H.	361	L3583	Camshaft - L.H.	372	L4708EQ23	Lined Brake Shoe	298
L3395	Brake Shoe	301	L3521	Automatic Slack Adjuster	398	L3584	Camshaft - R.H.	372	L4709E20	Lined Brake Shoe	298
L3398	Camshaft - R.H.	389	L3522	Automatic Slack Adjuster	398	L3585	Camshaft - L.H.	372	L4709E23	Lined Brake Shoe	298
L3399	Camshaft - L.H.	389	L3523	Automatic Slack Adjuster	398	L3586	Camshaft - R.H.	372	LBT403	Cam Bushing Tool Kit	407
L3400	Camshaft - R.H.	372	L3524	Automatic Slack Adjuster	398	L3587	Camshaft - L.H.	372	LBT4032	Cam Bushing Tool Kit	407
L3401	Camshaft - L.H.	372	L3525	Camshaft Bracket	412	L3588	Camshaft - R.H.	372	W1	Rim Clamp	426
L3402	Camshaft - R.H.	390	L3526	Automatic Slack Adjuster	398	L3589	Camshaft - L.H.	372	W2	Rim Clamp	426
L3403	Camshaft - L.H.	390	L3527	Brake Shoe	300	L3598	Camshaft - R.H.	360	W3	Rim Clamp	426
L3404	Camshaft - R.H.	363	L3528	Automatic Slack Adjuster	398	L3599	Camshaft - L.H.	360	W4	Rim Clamp	427
L3405	Camshaft - L.H.	363	L3529	Automatic Slack Adjuster	398	L3600	Camshaft - R.H.	367	W5	Rim Stud	435
L3406	Camshaft - R.H.	365	L3530	Automatic Slack Adjuster	398	L3601	Camshaft - L.H.	367	W6	Rim Stud	435
L3407	Camshaft - L.H.	365	L3531	Automatic Slack Adjuster	398	L3602	Hub Cap	258	W7	Rim Nut	437
L3408	Camshaft - R.H.	364	L3532	Automatic Slack Adjuster	398	L3603	Hub Cap Lens Kit	258	W8	Rim Nut	437
L3409	Camshaft - L.H.	364	L3533	Automatic Slack Adjuster	398	L3604	Automatic Slack Adjuster	399	W9	Rim Bolt	434
L3410	Camshaft - R.H.	363	L3534	Automatic Slack Adjuster	398	L3605	Automatic Slack Adjuster	399	W11	Inner Nut	461
L3411	Camshaft - L.H.	363	L3535	Automatic Slack Adjuster	398	L3606	Automatic Slack Adjuster	399	W12	Inner Nut	461
L3412	Camshaft - R.H.	363	L3536	Automatic Slack Adjuster	398	L3607	Automatic Slack Adjuster	399	W13	Outer Nut	464
L3413	Camshaft - L.H.	363	L3537	Automatic Slack Adjuster	398	L3608	Automatic Slack Adjuster	399	W14	Outer Nut	464
L3414	Camshaft - R.H.	389	L3538	Automatic Slack Adjuster	398	L3609	Automatic Slack Adjuster	399	W15	Outer Nut	463
L3415	Camshaft - L.H.	389	L3539	Automatic Slack Adjuster	398	L3610	Automatic Slack Adjuster	399	W16	Outer Nut	463
L3416	Camshaft - R.H.	389	L3540	Clevis Pin Set	403	L3611	Automatic Slack Adjuster	399	W19	Rim Bolt	434
L3417	Camshaft - L.H.	389	L3541	Automatic Slack Adjuster	398	L3612	Automatic Slack Adjuster	399	W21	Rim Bolt	434
L3418	Camshaft - R.H.	390	L3542	Dust Shield	317	L3613	Automatic Slack Adjuster	399	W22	Rim Stud	435
L3419	Camshaft - L.H.	390	L3543	Hub Cap	258	L3614	Automatic Slack Adjuster	399	W24	Back Nut	467
L3420	Camshaft - R.H.	371	L3544	Camshaft - R.H.	356	L3615	Automatic Slack Adjuster	399	W27	Rim Nut	437
L3421	Camshaft - L.H.	371	L3545	Camshaft - L.H.	356	L3616	Automatic Slack Adjuster	399	W28	Rim Nut	437
L3422	Camshaft - R.H.	378	L3546	Camshaft - R.H.	367	L3617	Automatic Slack Adjuster	399	W29	Rim Nut	437
L3423	Camshaft - L.H.	378	L3547	Camshaft - L.H.	367	L3618	Automatic Slack Adjuster	399	W30	Rim Nut	437
L3424	Camshaft - R.H.	364	L3548	Camshaft - R.H.	367	L3620	Automatic Slack Adjuster	399	W34	Rim Nut	437
L3425	Camshaft - L.H.	364	L3549	Camshaft - L.H.	367	L3621	Automatic Slack Adjuster	399	W35	Rim Nut	437
L3436	Camshaft - R.H.	389	L3550	Camshaft - R.H.	367	L3622	Automatic Slack Adjuster	399	W36	Shoulder Stud	456
L3437	Camshaft - L.H.	389	L3551	Camshaft - L.H.	367	L3623	Automatic Slack Adjuster	399	W37	Shoulder Stud	456
L3444	Camshaft - R.H.	379	L3552	Camshaft - R.H.	364	L3624	Automatic Slack Adjuster	399	W38	Shoulder Stud	456
L3445	Camshaft - L.H.	379	L3553	Camshaft - L.H.	364	L3625	Automatic Slack Adjuster	399	W39	Shoulder Stud	456
L3472	Axle Nut	269	L3554	Camshaft - R.H.	364	L3626	Camshaft - R.H.	365	W40	Shoulder Stud	456
L3473	Axle Washer	281	L3555	Camshaft - L.H.	364	L3627	Camshaft - L.H.	365	W41	Shoulder Stud	456
L3474	Axle Washer	281	L3556	Camshaft - R.H.	362	L3628	Camshaft - R.H.	360	W42	Shoulder Stud	456
L3480	Camshaft - R.H.	365	L3557	Camshaft - L.H.	362	L3629	Camshaft - L.H.	360	W43	Shoulder Stud	456
L3481	Camshaft - L.H.	365	L3558	Camshaft - R.H.	365	L3630	Camshaft - R.H.	365	W44	Shoulder Stud	456
L3482	Camshaft - R.H.	390	L3559	Camshaft - L.H.	365	L3631	Camshaft - L.H.	365	W45	Shoulder Stud	456
L3483	Camshaft - L.H.	390	L3560	Camshaft - R.H.	395	L4311E20	Lined Brake Shoe	298	W46	Shoulder Stud	456
L3484	Camshaft Bracket Assembly	408	L3561	Camshaft - L.H.	395	L4311E23	Lined Brake Shoe	298	W47	Shoulder Stud	456
L3485	Camshaft Bracket Assembly	408	L3562	Camshaft - R.H.	361	L4515FQ20	Lined Brake Shoe	299	W48	Shoulder Stud	456
L3486	Camshaft - R.H.	362	L3563	Camshaft - L.H.	361	L4515FQ23	Lined Brake Shoe	299	W49	Shoulder Stud	456
L3487	Camshaft - L.H.	362	L3564	Automatic Slack Adjuster	398	L4515FX320	Lined Brake Shoe	299	W50	Shoulder Stud	456
L3488	Camshaft - R.H.	367	L3565	Axle Nut	277	L4515FX323	Lined Brake Shoe	299	W51	Shoulder Stud	456
L3489	Camshaft - L.H.	367	L3566	Axle Washer	289	L4515Q20	Lined Brake Shoe	298, 299	W52	Shoulder Stud	456
L3490	Camshaft - R.H.	389	L3567	Axle Washer	289				W53	Shoulder Stud	456
L3491	Camshaft - L.H.	389	L3568	Axle Nut	269	L4515Q23	Lined Brake Shoe	298, 299	W54	Shoulder Stud	456
L3492	Camshaft - R.H.	384	L3569	Axle Nut	268				W55	Shoulder Stud	456
L3493	Camshaft - L.H.	384	L3570	Axle Washer	280	L4524MQ20	Lined Brake Shoe	297	W64	Headed Stud	443

# NUMERICAL LIST

Leland No.	Description	Page No.	Leland No.	Description	Page No.	Leland No.	Description	Page No.	Leland No.	Description	Page No.
W65	Headed Stud	443	W157	Inner Nut	461	W268	Shoulder Stud	458	W359	Headed Stud	454
W66	Headed Stud	443	W160	Inner Nut	462	W269	Shoulder Stud	458	W362	Headed Stud	454
W67	Headed Stud	443	W161	Inner Nut	462	W270	Headed Stud	448	W363	Headed Stud	454
W68	Headed Stud	443	W166	Headed Stud	449	W271	Headed Stud	448	W364	Headed Stud	454
W69	Headed Stud	443	W167	Headed Stud	449	W272	Headed Stud	448	W365	Headed Stud	454
W70	Headed Stud	444	W168	Headed Stud	449	W273	Headed Stud	448	W366	Headed Stud	448
W71	Headed Stud	444	W169	Headed Stud	449	W274	Headed Stud	448	W367	Headed Stud	448
W72	Headed Stud	444	W170	Headed Stud	449	W275	Headed Stud	448	W370	Headed Stud	448
W73	Headed Stud	444	W171	Headed Stud	449	W276	Headed Stud	448	W371	Headed Stud	448
W74	Headed Stud	438	W180	Headed Stud	440	W277	Headed Stud	448	W372	Headed Stud	444
W76	Headed Stud	439	W181	Headed Stud	440	W278	Headed Stud	444	W373	Headed Stud	444
W77	Headed Stud	439	W182	Flanged Nut	465	W279	Headed Stud	444	W374	Headed Stud	448
W78	Headed Stud	439	W183	Flanged Nut	465	W280	Headed Stud	444	W375	Headed Stud	448
W79	Headed Stud	439	W184	Rim Clamp	427	W281	Headed Stud	444	W376	Headed Stud	455
W80	Headed Stud	439	W197	Rim Clamp	428	W282	Headed Stud	444	W377	Headed Stud	455
W81	Headed Stud	439	W205	Shoulder Stud	457	W283	Headed Stud	444	W378	Headed Stud	448
W82	Headed Stud	439	W206	Shoulder Stud	457	W284	Headed Stud	444	W379	Headed Stud	448
W83	Headed Stud	439	W207	Shoulder Stud	457	W285	Headed Stud	444	W380	Headed Stud	448
W84	Headed Stud	439	W208	Shoulder Stud	457	W286	Headed Stud	444	W381	Headed Stud	448
W85	Headed Stud	439	W209	Shoulder Stud	457	W287	Headed Stud	444	W384	Headed Stud	440
W89	Rim Stud	436	W210	Shoulder Stud	457	W288	Headed Stud	454	W385	Headed Stud	440
W90	Rim Stud	436	W211	Shoulder Stud	457	W289	Headed Stud	454	W386	Headed Stud	441
W91	Rim Stud	436	W212	Shoulder Stud	457	W290	Headed Stud	454	W387	Headed Stud	441
W92	Rim Stud	436	W215	Shoulder Stud	457	W291	Headed Stud	454	W388	Headed Stud	444
W93	Rim Stud	436	W216	Shoulder Stud	457	W292	Headed Stud	454	W389	Headed Stud	444
W94	Rim Stud	436	W220	Rim Bolt	434	W293	Headed Stud	454	W390	Headed Stud	444
W95	Rim Stud	436	W221	Rim Nut	437	W294	Headed Stud	454	W391	Headed Stud	440
W96	Rim Stud	436	W223	Wheel Hub	292	W295	Headed Stud	454	W392	Headed Stud	440
W97	Rim Stud	436	W226	Rim Clamp	433	W304	Shoulder Stud	457	W393	Headed Stud	440
W98	Rim Stud	436	W227	Rim Clamp	433	W305	Shoulder Stud	457	W394	Headed Stud	440
W101	Headed Stud	445	W228	Outer Nut	463	W308	Shoulder Stud	459	W395	Headed Stud	448
W102	Headed Stud	445	W229	Outer Nut	463	W309	Shoulder Stud	459	W396	Headed Stud	448
W103	Headed Stud	446	W230	Outer Nut	463	W314	Shoulder Stud	460	W397	Headed Stud	448
W104	Headed Stud	446	W231	Outer Nut	463	W315	Shoulder Stud	460	W398	Headed Stud	448
W109	Back Nut	467	W232	Back Nut	467	W316	Shoulder Stud	459	W399	Headed Stud	448
W110	Back Nut	342, 467	W234	Flanged Nut	466	W317	Shoulder Stud	459	W400	Headed Stud	448
W111	Back Nut	467	W235	Flanged Nut	466	W320	Shoulder Stud	459	W401	Headed Stud	446
W112	Back Nut	467	W236	Headed Stud	444	W321	Shoulder Stud	459	W402	Headed Stud	446
W115	Flanged Nut	465	W237	Headed Stud	444	W324	Shoulder Stud	460	W403	Rim Clamp	427
W116	Flanged Nut	465	W238	Rim Clamp	433	W325	Shoulder Stud	460	W404	Rim Clamp	426
W117	Rim Clamp	427	W240	Headed Stud	454	W330	Headed Stud	454	W405	Rim Clamp	426
W118	Rim Clamp	427	W241	Headed Stud	454	W331	Headed Stud	454	W406	Rim Clamp	427
W119	Rim Clamp	426	W242	Headed Stud	454	W332	Headed Stud	454	W407	Rim Clamp	428
W120	Rim Clamp	426	W243	Headed Stud	454	W333	Headed Stud	454	W408	Rim Clamp	428
W121	Rim Clamp	427	W244	Headed Stud	454	W334	Shoulder Stud	456	W414	Rim Clamp	429
W122	Outer Nut	464	W245	Headed Stud	454	W335	Shoulder Stud	456	W415	Rim Clamp	429
W123	Outer Nut	464	W246	Rim Stud	435	W336	Shoulder Stud	458	W416	Rim Clamp	429
W124	Rim Clamp	428	W251	Wheel Hub	292	W337	Shoulder Stud	458	W417	Rim Clamp	429
W125	Headed Stud	445	W253	Wheel Hub	292	W338	Shoulder Stud	458	W418	Rim Clamp	430
W126	Headed Stud	445	W254	Wheel Hub	292	W339	Shoulder Stud	458	W420	Rim Clamp	433
W134	Rim Clamp	430	W255	Rim Clamp	430	W342	Shoulder Stud	460	W426	Outer Nut	464
W135	Rim Clamp	430	W256	Rim Clamp	430	W343	Shoulder Stud	460	W427	Outer Nut	464
W136	Rim Clamp	428	W257	Rim Clamp	431	W344	Shoulder Stud	460	W429	Rim Stud	435
W143	Rim Clamp	432	W258	Rim Clamp	431	W345	Shoulder Stud	460	W430	Rim Stud	435
W144	Rim Clamp	432	W259	Rim Clamp	431	W346	Shoulder Stud	460	W431	Rim Stud	435
W145	Rim Clamp	432	W260	Headed Stud	445	W347	Shoulder Stud	460	W432	Rim Stud	435
W146	Rim Clamp	429	W261	Headed Stud	445	W348	Shoulder Stud	460	W446	Rim Clamp	430
W149	Rim Clamp	428	W262	Headed Stud	445	W349	Shoulder Stud	460	W447	Rim Clamp	432
W151	Rim Stud	435	W263	Headed Stud	445	W350	Shoulder Stud	460	W448	Rim Clamp	432
W152	Rim Nut	437	W264	Headed Stud	445	W351	Shoulder Stud	460	W449	Rim Clamp	432
W154	Outer Nut	465	W265	Headed Stud	445	W354	Headed Stud	454	W450	Rim Clamp	427
W155	Outer Nut	465	W266	Shoulder Stud	458	W355	Headed Stud	454	W451	Back Nut	342, 467
W156	Inner Nut	461	W267	Shoulder Stud	458	W358	Headed Stud	454	W454	Shoulder Stud	457

# NUMERICAL LIST

Leland No.	Description	Page No.	Leland No.	Description	Page No.	Leland No.	Description	Page No.	Leland No.	Description	Page No.
W455	Shoulder Stud	457	W531	Metric Headed Stud	455	W597	Rim Stud	436	W672	Headed Stud	448
W456	Rim Clamp	429	W533	Rim Clamp	430	W598	Headed Stud	438	W673	Headed Stud	448
W458	Flanged Nut	465	W534	Rim Clamp	433	W599	Headed Stud	438	W674	Headed Stud	443
W459	Shoulder Stud	458	W535	Metric Headed Stud	449	W600	Headed Stud	438	W675	Headed Stud	443
W460	Shoulder Stud	458	W536	Rim Clamp	427	W601	Headed Stud	438	W676	Metric Headed Stud	453
W461	Shoulder Stud	458	W537	Rim Clamp	427	W602	Headed Stud	438	W677	Headed Stud	440
W462	Shoulder Stud	458	W538	Flanged Nut	466	W603	Headed Stud	439	W678	Metric Headed Stud	452
W463	Shoulder Stud	458	W539	Rim Clamp	431	W604	Headed Stud	439	W679	Metric Headed Stud	453
W464	Shoulder Stud	458	W540	Rim Bolt	434	W606	Shoulder Stud	460	W680	Headed Stud	443
W465	Shoulder Stud	458	W542	Headed Stud	444	W607	Shoulder Stud	460	W681	Headed Stud	443
W466	Shoulder Stud	458	W543	Headed Stud	444	W608	Headed Stud	443	W682	Headed Stud	440
W467	Rim Clamp	432	W544	Metric Headed Stud	452	W609	Headed Stud	443	W683	Metric Headed Stud	453
W474	Flanged Nut	466	W545	Metric Headed Stud	452	W610	Headed Stud	443	W684	Headed Stud	443
W475	Headed Stud	448	W546	Metric Headed Stud	452	W611	Headed Stud	443	W685	Headed Stud	443
W476	Headed Stud	448	W547	Metric Headed Stud	451	W612	Headed Stud	445	W686	Headed Stud	443
W477	Headed Stud	454	W548	Headed Stud	448	W613	Headed Stud	445	W687	Headed Stud	443
W478	Headed Stud	454	W549	Headed Stud	448	W616	Inner Nut	462	W688	Metric Headed Stud	452
W479	Rim Clamp	432	W550	Headed Stud	454	W617	Inner Nut	462	W689	Metric Headed Stud	450
W480	Wheel Hub	292	W551	Headed Stud	454	W618	Flanged Nut	466	W690	Metric Headed Stud	453
W481	Wheel Hub	292	W552	Shoulder Stud	458	W619	Flanged Nut	466	W693	Wheel Hub	294
W486	Inner Nut	461	W553	Shoulder Stud	458	W620	Inner Nut	462	W694	Inner Nut	461
W487	Inner Nut	461	W554	Drive Flange Nut	261	W621	Inner Nut	462	W695	Inner Nut	461
W489	Metric Headed Stud	453	W555	Drive Flange Nut	261	W622	Brake Drum Bolt Assy.	468	W696	Wheel Hub	294
W490	Metric Headed Stud	453	W556	Drive Flange Nut	261	W623	Flanged Nut	466	W697	Wheel Hub	294
W491	Metric Headed Stud	453	W557	Drive Flange Nut	261	W626	Headed Stud	447	W698	Headed Stud	443
W492	Flanged Nut	467	W558	Drive Flange Nut	261	W627	Headed Stud	447	W699	Headed Stud	443
W494	Rim Clamp	432	W559	Drive Flange Nut	261	W628	Headed Stud	441	W700	Headed Stud	447
W495	Metric Headed Stud	451	W560	Brake Drum Screw	468	W629	Headed Stud	441	W701	Headed Stud	447
W496	Metric Headed Stud	451	W561	Brake Drum Bolt Assy.	468	W630	Shoulder Stud	459	W702	Metric Headed Stud	451
W497	Metric Headed Stud	451	W562	Brake Drum Bolt Assy.	468	W631	Shoulder Stud	459	W703	Metric Headed Stud	451
W498	Flanged Nut	467	W563	Brake Drum Bolt Assy.	468	W634	Headed Stud	443	W704	Headed Stud	442
W499	Shoulder Stud	459	W564	Brake Drum Bolt Assy.	468	W635	Headed Stud	443	W705	Headed Stud	442
W500	Shoulder Stud	456	W565	Rim Clamp	431	W636	Headed Stud	441	W706	Headed Stud	442
W501	Shoulder Stud	456	W566	Rim Clamp	433	W637	Headed Stud	441	W707	Headed Stud	442
W502	Shoulder Stud	456	W567	Rim Clamp	433	W638	Headed Stud	445	W708	Metric Headed Stud	451
W503	Shoulder Stud	456	W568	Rim Clamp	429	W639	Headed Stud	445	W709	Outer Nut	463
W504	Headed Stud	446	W569	Rim Clamp	432	W640	Shoulder Stud	460	W710	Headed Stud	454
W505	Headed Stud	446	W570	Rim Clamp	430	W641	Shoulder Stud	460	W711	Headed Stud	454
W506	Outer Nut	464	W571	Rim Clamp	430	W642	Headed Stud	445	W712	Headed Stud	454
W507	Outer Nut	464	W572	Rim Clamp	432	W643	Headed Stud	445	W713	Headed Stud	454
W508	Outer Nut	464	W574	Metric Headed Stud	451	W644	Headed Stud	443	W714	Metric Headed Stud	452
W509	Outer Nut	464	W575	Headed Stud	443	W645	Headed Stud	443	W715	Metric Headed Stud	452
W510	Headed Stud	454	W576	Headed Stud	443	W646	Headed Stud	441	W716	Metric Headed Stud	451
W511	Headed Stud	454	W577	Headed Stud	444	W647	Headed Stud	441	W717	Metric Headed Stud	451
W512	Shoulder Stud	460	W578	Headed Stud	444	W648	Headed Stud	443	W718	Metric Headed Stud	451
W513	Shoulder Stud	460	W579	Shoulder Stud	456	W649	Headed Stud	443	W719	Metric Headed Stud	451
W514	Headed Stud	441	W580	Shoulder Stud	456	W650	Metric Headed Stud	453	W720	Inner Nut	462
W515	Headed Stud	441	W581	Shoulder Stud	458	W652	Headed Stud	443	W721	Inner Nut	462
W516	Shoulder Stud	460	W582	Shoulder Stud	458	W653	Headed Stud	443	W722	Outer Nut	465
W517	Shoulder Stud	460	W583	Outer Nut	463	W656	Metric Headed Stud	452	W723	Outer Nut	465
W518	Shoulder Stud	457	W584	Outer Nut	463	W657	Metric Headed Stud	452	W724	Headed Stud	454
W519	Shoulder Stud	457	W585	Outer Nut	463	W660	Rim Clamp	433	W725	Headed Stud	454
W520	Headed Stud	454	W586	Outer Nut	463	W661	Metric Headed Stud	452	W726	Headed Stud	442
W521	Headed Stud	454	W587	Outer Nut	463	W662	Metric Headed Stud	455	W727	Headed Stud	442
W522	Headed Stud	444	W588	Outer Nut	463	W663	Metric Headed Stud	455	W728	Headed Stud	442
W523	Headed Stud	444	W589	Outer Nut	463	W664	Headed Stud	443	W729	Headed Stud	442
W524	Metric Headed Stud	451	W590	Flanged Nut	465	W665	Headed Stud	443	W730	Headed Stud	442
W525	Flanged Nut	466	W591	Flanged Nut	465	W666	Headed Stud	445	W731	Headed Stud	442
W526	Headed Stud	444	W592	Rim Stud	436	W667	Headed Stud	445	W732	Headed Stud	447
W527	Headed Stud	444	W593	Rim Stud	436	W668	Headed Stud	440	W733	Headed Stud	447
W528	Headed Stud	444	W594	Rim Stud	436	W669	Metric Headed Stud	452	W734	Headed Stud	447
W529	Headed Stud	444	W595	Rim Stud	436	W670	Headed Stud	443	W735	Headed Stud	447
W530	Metric Headed Stud	455	W596	Rim Stud	436	W671	Headed Stud	443	W736	Headed Stud	447

# NUMERICAL LIST

Leland No.	Description	Page No.	Leland No.	Description	Page No.	Leland No.	Description	Page No.	Leland No.	Description	Page No.
W737	Headed Stud .....	447	WT4	Stud Setter .....	469	5 X 12	Brake Lining Rivet .....	314			
W738	Headed Stud .....	449	WT5	Stud/Nut Removal Kit .....	469	6 X 12	Brake Lining Rivet .....	314			
W739	Headed Stud .....	449	WT6	Rib Nut Tool .....	469	8 X 18	Brake Lining Rivet .....	314			
W742	Headed Stud .....	442	WT7	Rib Nut Tool .....	469	8 X 20	Brake Lining Rivet .....	314			
W743	Headed Stud .....	442	WT8	Rib Nut Tool .....	469	10 X 18	Brake Lining Rivet .....	314			
W744	Headed Stud .....	442	WT100	Chrome Cover Nut Pliers ....	470						
W745	Headed Stud .....	442	WT300	Budd Nut Wrench .....	470						
W746	Outer Nut .....	464	WT301	Budd Nut Wrench .....	470						
W747	Outer Nut .....	464	WT303	Torque Stick .....	470						
W748	Rim Nut .....	437	WT304	Torque Stick .....	470						
W749	Flanged Nut .....	466	WT305	Torque Stick .....	470						
W750	Headed Stud .....	454	WT306	Torque Stick .....	470						
W751	Headed Stud .....	454	WT307	Torque Stick .....	470						
W752	Headed Stud .....	442	WT308	Torque Stick .....	470						
W753	Headed Stud .....	442	WT309	Torque Stick .....	470						
W754	Headed Stud .....	442	WT310	Torque Stick .....	470						
W755	Headed Stud .....	442	WT311	Torque Stick .....	470						
W756	Metric Headed Stud .....	455	3-3M	Brake Lining Rivet .....	314						
W757	Metric Headed Stud .....	455	3-3MS	Brake Lining Rivet .....	314						
W758	Shoulder Stud .....	456	4-4 1/2M	Brake Lining Rivet .....	314						
W759	Metric Headed Stud .....	450	4-4 1/2MS	Brake Lining Rivet .....	314						
W760	Wheel Hub .....	293	4-4M	Brake Lining Rivet .....	314						
W760A	Wheel Hub .....	293	4-4MS	Brake Lining Rivet .....	314						
W760T	Wheel Hub .....	293	5-5M	Brake Lining Rivet .....	314						
W761	Brake Drum Bolt Assy. ....	468	5-5MS	Brake Lining Rivet .....	314						
W762	Brake Drum Bolt Assy. ....	468	7-4M	Brake Lining Rivet .....	314						
W764	Wheel Hub .....	294	7-4MS	Brake Lining Rivet .....	314						
W765	Metric Headed Stud .....	450	7-5M	Brake Lining Rivet .....	314						
W766	Inner Nut .....	461	7-5MS	Brake Lining Rivet .....	314						
W767	Inner Nut .....	461	7-6M	Brake Lining Rivet .....	314						
W768	Wheel Hub .....	293	7-6MS	Brake Lining Rivet .....	314						
W769	Wheel Hub .....	294	7-7M	Brake Lining Rivet .....	314						
W770	Metric Headed Stud .....	450	7-7MS	Brake Lining Rivet .....	314						
W771	Metric Headed Stud .....	451	7-8M	Brake Lining Rivet .....	314						
W772	Metric Headed Stud .....	451	7-8MS	Brake Lining Rivet .....	314						
W773	Metric Headed Stud .....	451	8-6M	Brake Lining Rivet .....	314						
W774	Metric Headed Stud .....	455	8-6MS	Brake Lining Rivet .....	314						
W775	Metric Headed Stud .....	455	8-7M	Brake Lining Rivet .....	314						
W776	Headed Stud .....	443	8-7MS	Brake Lining Rivet .....	314						
W777	Headed Stud .....	443	8-8M	Brake Lining Rivet .....	314						
W778	Metric Headed Stud .....	455	8-8MS	Brake Lining Rivet .....	314						
W779	Metric Headed Stud .....	455	8-9M	Brake Lining Rivet .....	314						
W782	Headed Stud .....	446	8-9MS	Brake Lining Rivet .....	314						
W783	Headed Stud .....	446	8-10M	Brake Lining Rivet .....	314						
W784	Headed Stud .....	443	8-10MS	Brake Lining Rivet .....	314						
W785	Headed Stud .....	443	10-7M	Brake Lining Rivet .....	314						
W786	Metric Headed Stud .....	450	10-7MS	Brake Lining Rivet .....	314						
W787	Metric Headed Stud .....	450	10-8M	Brake Lining Rivet .....	314						
W788	Headed Stud .....	447	10-8MS	Brake Lining Rivet .....	314						
W789	Headed Stud .....	447	10-81/2M	Brake Lining Rivet .....	314						
W790	Metric Headed Stud .....	450	10-81/2MS	Brake Lining Rivet .....	314						
W791	Metric Headed Stud .....	450	10-9M	Brake Lining Rivet .....	314						
WG100	Rim Insulator .....	472	10-9MS	Brake Lining Rivet .....	314						
WG101	Rim Insulator .....	472	10-10M	Brake Lining Rivet .....	314						
WG102	Rim Insulator .....	472	10-10MS	Brake Lining Rivet .....	314						
WG104	Rim Insulator .....	472	10-12M	Brake Lining Rivet .....	314						
WG105	Rim Insulator .....	472	10-12MS	Brake Lining Rivet .....	314						
WSG106	Rim Protector .....	472	20-8M	Brake Lining Rivet .....	314						
WSG107	Rim Protector .....	472	20-8MS	Brake Lining Rivet .....	314						
WSG108	Wheel Shield .....	472	20-81/2M	Brake Lining Rivet .....	314						
WT1	Stud/Nut Removal Tool .....	469	20-81/2MS	Brake Lining Rivet .....	314						
WT2	Stud/Nut Removal Tool .....	469	20-9M	Brake Lining Rivet .....	314						
WT3	Stud Setter .....	469	20-9MS	Brake Lining Rivet .....	314						